 


请阅读并保存本手册,以确保安全有效地使用本加湿器




4.当机器水位过低时。本机会自动切断电源,停止工作。请先关闭电

产品的工作原理

源开关, 然后向水箱内加水。

1.把机器放在水平的桌子上。拿起水箱盖,往水箱内注入适量干净的 自来水或纯净水至最高水位线(MAX)。(注水时必须关闭电源) 2.盖上水箱盖,开启电源。在接通电源前,请确认额定电压必须与机 器的工作电压一致。 3.打开电源开关,机器开始工作。

型号	F5
额定电压	100-240V
额定功率	25W
额定频率	50/60Hz
水箱容量	3.5L
最大喷雾	300ML/h
操作方式	触屏/遥控
产品尺寸	186x186x298mm

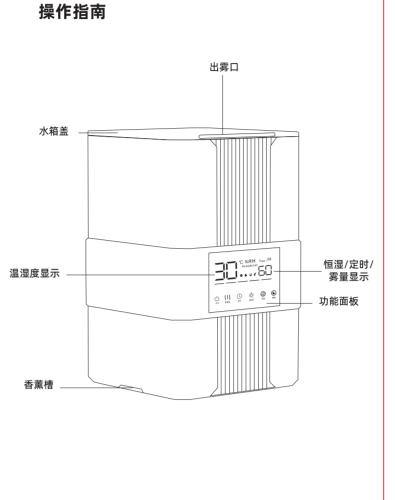

智能款操作指南


1.电源键:接通电源后轻触电源键,液晶显示屏亮起机器工作,再次轻 触电源键加湿器停止工作进入待机状态。 2.定时键:本产品具有预约定时功能,可定时1小时,2小时至8小时八 个时间定时关机,轻触本键设定关机时间,每次按该键显示屏会显示 相应的时间。

3.雾量键:产品分为零雾量,低雾量,中雾量,高雾量档,雾量可调,每 次按下雾量键进行循环调整,产品开机默认为最大雾量工作。

4.恒湿键:第一次按下该键产品进入恒湿功能,液晶显示屏上的"环境

,以此循环调整,当环境湿度达到预设的湿度值后停止工作。 5.灯光键:开启后灯光默认为暖灯,按一下 切换蓝灯,再按一下关闭灯光。

6.睡眠模式:在产品控制面版上触控睡眠键启动睡眠功能,智能恒湿 65%,显示屏内闪烁5秒后自动关闭显示屏,产品保持原档位工作,按 下任意功能键点亮显示屏显示当前工作状态,在显示屏亮起状态下按 任意功能键退出睡眠功能。

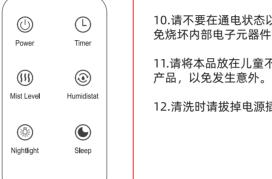

安全注意事项 (请仔细阅读并严格遵守)

1.请勿用湿手拔插头,以免触电危险。

2.未经授权,请勿拆卸、修理或修改本产品。 3.启动时,请不要用手触摸雾化片,否则会感到疼痛。

> 4.电源线不得划伤、损坏,打结,不要按沉重的物件或夹子处 理,否则可能引起触电,短路和火灾。

5.请不要私自更换电源线,如有异常请立即拔下插头,并与厂 湿度"亮起,默认湿度为40%,后按5%递增直到90%后退出恒湿功能 家或售后客服联系。 6.如果电源线损坏,为了避免危险,必须由厂家的专业人员进

7.工作时请不要接触水箱内的水和零件。

8.这台机器仅供室内使用。

9.长时间不使用或雷雨天气时,请拔掉电源插头。 10.请不要在通电状态以及内部有水的情况下降翻转机器,以

免烧坏内部电子元器件。 11.请将本品放在儿童不能接触的地方,勿让儿童使用或操作本

12.清洗时请拔掉电源插头。

警告标志 (请仔细阅读并严格遵守)

加湿器利用超声波雾化膜振动将液态水分解成水雾,水箱只是一个 过渡性的储水工具,所有加湿器底座都会积水,请放心使用。

如果在使用过程中机器周围有水,则表明房间湿度过高。请把它调 整到合适的雾量档。

3.关于遥控器电池 遥控器的电池更换方法和电池型号请参考遥控器背面的说明书。

故障排除方法

			一 产品中
故障现象	原因分析	排除方法	
屏幕无显示	电源未接通/开关未打开	接通电源/开关打开	部件名称
			外壳塑料件
		法加水籍容易到话当位署	风机
T机显示屏闪动亮红灯不喷雾	后等符一分刊	线路板组件	
		74 313 7371	五金, 紧固
			硅胶件
T17 T # T = ==	1.雾化片结水垢	1.清洁雾化片	内部导线
开机正常无喷雾	2.恒湿设置低于周边湿度	2.调高恒湿值或关闭恒湿 功能	电源线组件
		力用的	本表格依据
			O: 表示该不
异常噪音	与放置的台面产生共鸣	放置在坚固平稳的平面上	X: 表示该有
			注: 本表公
屏幕显示、水箱有水,但总是	开关感应浮子被卡住	拔动浮子,让其上下活动顺	₩ 在本
显示缺水状态《圈标报警》	开大您应身了饭下住	畅	し 可以
			'

清洗维护

1. 每星期应对水箱、水槽、雾化片进行清洁,清洗前务必先拔掉电源插头。 2. 加湿器外部清洗:用低于40℃的干净软湿布擦拭干净外表面即可。 3. 清洗时请勿使用硬物,以免损坏部件。4. 请勿换用化学洗涤剂清洁。

5. 请经常更换水箱水,保持加湿器内部洁净。 6. 长期不使用时,请保持加湿器内部干燥。

换能器及机座除垢方法

清洁前,请务必关闭电源,拔下电源插头。 病治别,因为人物之物,以下治疗之。 转除垢剂倒入机座内,然后加入60度左右的温水,使除垢剂全部溶解,浸泡5-10分钟。 然后用清洁刷刷洗换能器表面,直至水垢去除。 同时清洗机座,用清水清洁机座及换能器表面。

产品中有害物质含量表

	产品中有害物质的名称及含量							
『件名称	铅(Pb)	汞(Hg)	镐(Cd)	六 价 铬	多澳联苯	多澳二苯		
				(Cr(VI))	(PBB)	醚(PBDE)		
卜壳塑料件	0	0	0	0	0	0		
机机	х	0	0	0	Х	х		
战路板组件	Х	0	0	Х	0	0		
i金,紧固件	0	0	0	Х	0	0		
上胶件	0	0	О	0	0	0		
部导线	0	0	0	0	0	0		
1源线组件	х	0	0	0	0	0		
表格依据 SJ/	T11364 的规	定编制						
:表示该有害	物质在该部位	件所有均质材	料中含量均	在 GB/T 26572	规定限量要求	以下 。		
表示该有害	物质至少在记	亥部件的某一	均质材料中含	含量超出 GB/1	26572 规定的	的限量要求。		
E: 本表公示的产品中有害物质含里不包含需定期更换的电池 。								
在本说	明书所述的正	常使用条件	下本产品的玩	「保使用期限)	勺 10 年,在环	保使用期内		
10 在本说的可以放	心使用,超过	は环保使用期	限之后则应该	该进入回收循环	不系统。			

请妥善保管此卡,本公司将以此卡作为保修凭证 感谢您购买本产品,本产品的保修期为购买期之日起12个月,请务必妥善保存,并填写详细相关信息,以备保修使用。

产品型号: 购买日期:

经销商名称:

用户姓名: 联系电话:


退货理由: 退货 换货 保修

需要保修服务时,请出示本卡·并请详细填写相关内容,本公司向用户提供自产品购买日起12个月保用期

在正常使用状态下出现的质量问题,并非外力破坏造成的损坏,本公司承担返修责任 ,原则上产品属于保修期间的用户无需支付费用,但是人为损坏则需酌情收取检测或 零配件费用,产品超出保修期的一律收费。

以下情况不能享受保修 人为损坏:如因使用不当,错误造成破坏,外观不正常磨损、摔损、电路销毁、挤压变形异物进入、受潮、产品上的密封标登被涂改或撕毁、以及其他任何可见人为损坏,其他情况如用户自身原因(擅自拆装修改、使用不当、操作不当进水等人为情况)所造成的损坏,因不可抗力造成的损坏,如地震、水灾、火灾、台风或战争等。

GB 4706.1-2005 GB 4706.48-2009

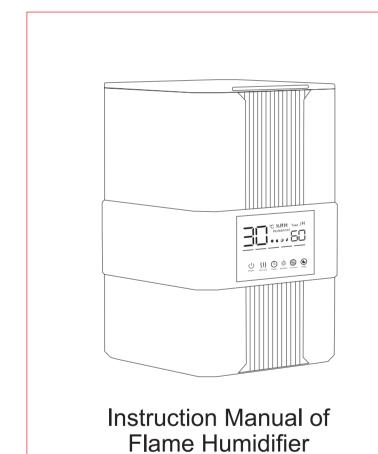

How the product works


The ultrasonic air humidifier uses ultrasonic vibration to generate 17 million times per second according to the frequency oscillation principle, which converts water into ultra-fine particles of 1~5 microns, and then diffuses water into the air through the pneumatic device, so as to achieve the purpose of humidifying the

Product usage

1. Put the machine on a horizontal table. Pick up the water tank cover and pour an appropriate amount of clean water into the tank Tap water or purified water to the maximum water level (MAX). (Power must be turned off when injecting water) 2. Cover the water tank cover and turn on the power. Before connecting to the power supply, please confirm that the rated voltage must match the machine The working voltage of the device is consistent.

3. Turn on the power switch and the machine starts working. 4. When the water level of the machine is too low. The machine will be cutting off the power supply and stops working. Please turn off the power switch first then add water to the water tank.

	Model NO	F5		
	Rated voltage	100-240v		
Instruction Manual of	Rated power	25W		
Flame Humidifier	Rated frequency	50/60Hz		
For Model: F5	Water tank Capacity	3.5L		
For Model: F5	Maximum Flow	300ML/h		
	Operate method	Touch/Remote control		
Please read and save this manual to ensure safe and effective use of this humidifier.	Size	186x186x298mm		

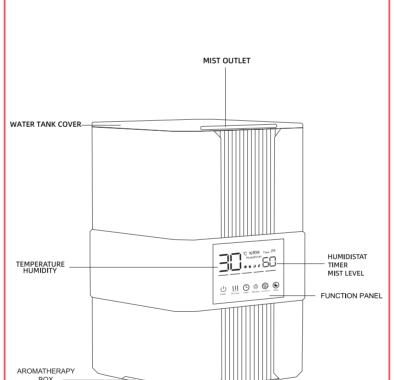

Operation guide

Operating instructions for smart models

theambient humidity reaches the preset hurnidity value.

1.Power key: after connecting the power, touch the power key, the LCD will lightup and the machine will work. Touch the power key again, the hurnidifier will stopworking and enter the standby mode.

2.Timer key: this product has the function of appointment timing. It can be shutdown for 1 hour, 2 hours to 8 hours. Touch this key to set the shutdown tirme, and the corresponding time will be displayed on the display screen each timeyou press this

3. Mist level key: the product is divided into zero mist volume, low mist volume, medium mist volume and high mist volume. The mist volume can be adjusted. Pressthe lower mist volume key to adjust the cycle each time. The product starts up with the maximum mist volume by default.

4. Constant humidity key: press this key for the first time, the product will enter theconstant humidity function, and the "ambient humidity" on the LCD will light up. The default humidity is 40%, and then press 5% to increase until 90% to exit theconstant humidity function, so as to adjust the cycle, and stop working when

5.Flame Light: The light defaults to warmn light once turnon, press it to switch to blue light, press again to turn off.

6.Sleep key: touch the key to start the sleep function on the product control panel.the intelligent constant humidity is 65%, and the display screen will automaticallyturn off after flashing for 5 seconds. The product keeps working in the original gear. Press any function key to light up the display screen to display the current workingstate. Press any function key to exit the sleep function when the display screen is on.

Power (11) Mist Level Humidistat Nightlight

otherwise it will make you feel painful.

1. Please do not pull the plug with wet hands to avoid the risk of electric shock. 2. Please do not disassemble, repair, or modify this product without authorization. 3. When starting up, please do not touch the atomizing sheet with your hands,

4. The power cord must not be scratched, damaged, knotted, and do not press heavy objects or clamps, processing, otherwise it may cause electric shock, short circuit, and fire.

5. Please do not replace the power cord without authorization. If there is any abnormality, please unplug the plug immediately and contact the manufacturer or after-sales customer service.

6. If the power cord is damaged, in order to avoid danger, it must be repaired by professional personnel of the manufacturer. 7. Please do not separate the water tank and the base during work, and do not

touch the water and parts in the base. 8. This machine is for indoor use only.

9. Please unplug the power plug when it is not in use for a long time or during 10. Please do not turn the machine over under the condition of power and water inside to avoid burning the internal electronic components.

11. Please put this product out of the reach of children. Do not let children use or operate this product to avoid accidents. 12. Unplug the power plug when filling water and cleaning.

Warning Sign

本公司竭诚为您服务。

About the base water: The humidifier uses ultrasonic atomizing film vibration to break up liquid water into water mist, and the water tank only is a transitional water storage tool, all humidifier base will accumulate water, please rest assured use.

经以上处理后,机器仍不能正常工作,请及时与公司售后服务中心或当地的经销商联系,

About mist adjustment:

If there is water around the machine during use, it indicates that the room humidity is too high, please adjust it to appropriate the amount of mist.

About the remote control battery:

For the battery replacement method and battery model of the remote control, please refer to the instructions on the back of the remote control.

Trouble shooting methods

If your humidifier is not working properly, please check below before requesting service

down smoothly

Cause Analysis Method of elimination No display on the screen connected and switch is the switch

not turned on Flashing red light on Low water level display screen, no spray location and wait one minute The atomizer scales Power-on is good. No spray setting is lower than the value or disable the constant Place it on a solid and flat Abnormal noise The machine recognizes that Move the float up and water in the tank, but

displayswater shortage, and status " Icon alarm" After the above treatment, the machine still can not work normally, please contact the company's after-sales service center or local dealers in time, our company will serve you wholeheartedly.

Cleaning maintenance

1. Clean the water tank, sink and atomizing sheet every week, and unplug the power plug before cleaning.

2. External cleaning: wipe the external surface with a clean soft cloth below 40°C . 3. Do not use hard objects to avoid damaging the parts.

4. Do not use chemical detergents to clean. 5. Always replace the water in the water tank to keep the inside of the humidifier clean. 6. When not in use for a long time, please keep the inside of the humidifier dry.

Descaling method of transducer and machine base

Before cleaning, make sure to turn off the power and unplug the power plug. Pour the disincrustant into the base, and then add warm water in about 60o to make the disincrustant dissolve all, and then soak for 5-10 minutes.

Use a cleaning brush to scrub the surface of the transducer until the scale is removed.

At the same time, clean the base and the surface of the machine with clean water.

Table of Harring Substances content of products						
	Name and content of harmful substances in products					
Part name	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Plastic housing	0	0	0	0	0	0
Blower fan	X	0	0	0	Х	X
Circuit board	X	0	0	Х	0	0
Fasteners	0	0	0	Х	0	0
Silicone piece	0	0	0	0	0	0
Internal conductor	0	0	0	0	0	0
Power cord	Х	0	0	0	0	0

This table is prepared according to S/T 11364, which indicates that the content of thehazardous substance in all materials of the part is in the quantity specified in GB/T26572. part, which is beyond the quantity specified in GB/T 26572. Note: in the products publicized in this table, there are gumax batteries which are notincluded in the quantity specified for replacement.

Under the normal usage conditions described in this manual, the environmental protection service life of this product is 10 years.

It can be used with confidence during the environmental protection service life, and after exceeding the environmental protection service life, it should enter the recycling system.

Warranty Card

Please keep this card properly. The company will take this card as the warranty certificate

Thank you for purchasing this product. The warranty period of this product is 12 months from he date of purchase. Please keep it properly and fill in detailed relevant information for warranty use.

Product model: Date of purchase:

Dealer name:

User name:

Explain the reason: Return goods Exchange goods Guarantee

Warranty conditions

Warranty scope

The quality problem under normal use is not the damage caused by external damage, the company assumes the responsibility for repair. In principle, the users of the product during the warranty period do not need to pay fees, but due to human damage, the cost of testing or spare parts shall be charged as appropriate, Products beyond the warranty period will be charged.

Warranty is not available under the following circumstances Man-made damage: for example, due to damage caused improper use and incorrect use, abnormal wear and tear of appearance, falling damage, circuit destruction, extr usion deformation, entry of foreign matters, moisture, alteration or tearing of sealing labels on products, and any other visible man-made damage, and other conditions, such as the user's own reasons (unauthorized disassembly and modification, unafraid use, improper operation, water ingress, etc.) Damage caused by force majeure, such as earthquake, flood, fire, typhoon or war.

CE ROHS FC X & MADE IN CHINA