



超声波加湿器使用说明书

请阅读并保存本手册，以确保安全有效地使用本加湿器

产品的工作原理

 
超声波空气加湿器是利用超声波振动每秒产生1700万次，根据频率振荡原理将水转化为1~5微米的超细颗粒，然后通过气动装置将水扩散到空气中，从而达到均匀加湿空气的目的。

产品使用情况

- 把机器放在水平的桌子上。拆下水箱盖，提起水箱。注入适量干净的自来水或蒸馏水至最高水位“标记在水箱的内部。（注水时必须按下电源插头）
- 将水箱放回机座上，盖上水箱盖，插上电源插头。在接通电源前，请确认额定电压必须与机器的工作电压一致。
- 打开电源开关/雾调节开关，机器开始工作。雾的量可以随意调节
- 当机器水位过低时，本机会自动切断电源，停止工作。请先关闭电源开关按下电源插头，然后向水箱加水。


型号	F6
额定电压	220v
额定功率	25W
额定频率	50/60Hz
水箱容量	5L
最大喷雾	300ML/h
操作方法	机械/智能
产品尺寸	200x200x320mm

操作指南

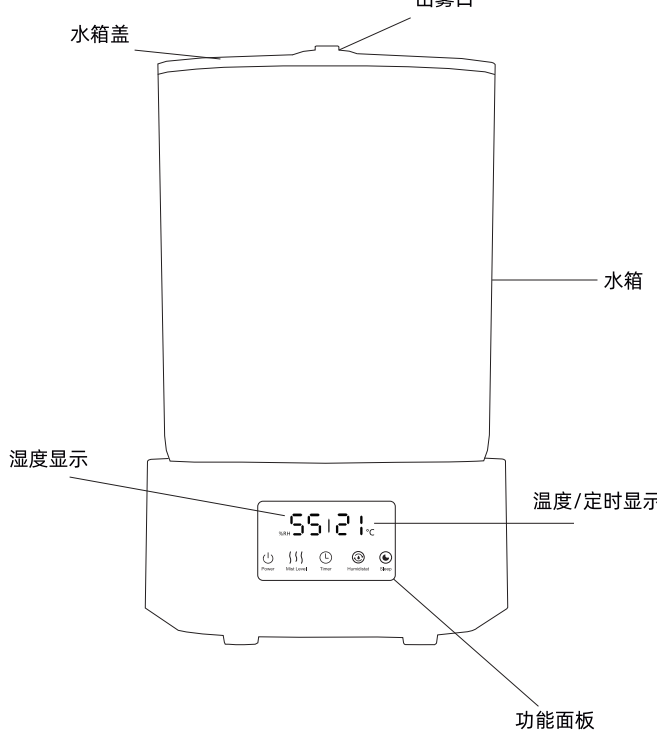


机械款操作指南

 - 把机器放在水平的桌面上，取下水箱盖，注入适量干净的自来水或蒸馏水(注水时必须按下电源插头)，水加到水箱内侧标示的“最高水位”即可。
- 把水箱平稳放在机座上，盖上水箱盖后将机器的电源插头插到插座上，接通电源前先确保本机器工作电压与使用电压必须相符。
- 打开电源开关/雾量调节开关，电源，并可以随意调节雾量大小。
- 当机器水槽的水位过低时，机器会自动切断电源并停止工作，请先关掉电源开关后拔掉电源插头再向水箱内加水。
- 七彩灯的使用：轻触右下角泡图键开启或关闭

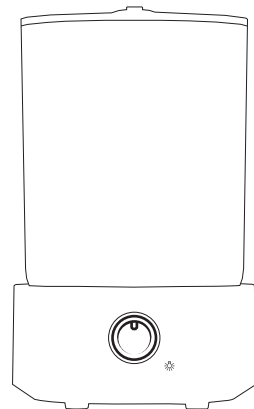

智能款操作指南

 - 电源键:接通电源后轻触电源键，液晶显示屏亮起机器工作，再次轻触电源键加湿器停止工作进入待机状态。
- 定时键:本产品具有预约定时功能，可定时1小时，2小时至8小时八个小时定时关机，轻触本键设定关机时间，每次按该键显示屏会显示相应的时间。
- 雾量键:产品分为零雾量，低雾量，中雾量，高雾量档,雾量可调，每次按下雾量键进行循环调整，产品开机默认为最大雾量工作。
- 恒温键:第一次按下该键产品进入恒温功能，液晶显示屏上的“环境温度”亮起，默认温度为40%，后按5%递增直到90%后退出恒温功能，以达循环调整，当环境温度达到预设的温度值后停止工作。
- 灯光键：长按定时键3秒，打开或关闭灯光功能。
- 睡眠模式:在产品控制面板上触控睡眠键自动睡眠功能，智能恒温65%，显示屏内闪烁5秒后自动关闭显示屏，产品保持原档位工作，产品保持原档位工作，按下任意功能键点亮显示屏显示当前工作状态，在显示屏亮起状态下按下任意功能键退出睡眠功能。

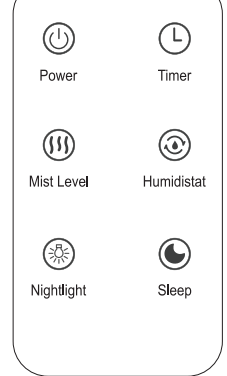

安全注意事项（请仔细阅读并严格遵守）

- 请勿用湿手拔插头，以免触电危险。
- 未经授权，请勿拆卸、修理或修改本产品。
- 启动时，请不要用手触摸雾化片，否则会感到疼痛。
- 电源线不得划伤、损坏、打结，不要按沉重的物件或夹子处理，否则可能引起触电，短路和火灾。
- 请不要私自更换电源线，如有异常请立即拔下插头，并与厂家或售后取得联系。
- 如果电源线损坏，为了避免危险，必须由厂家的专业人员进行维修。
- 工作时请不要接触水箱内的水和零件。
- 这台机器仅供室内使用。
- 长时间不使用或雷雨天气时，请拔掉电源插头。
- 请不要在通电状态以及内部有水的情况下下降翻转机器，以免损坏内部电子元件。
- 请将本品放在儿童不能接触的地方，勿让儿童使用或操作本产品，以免发生意外。
- 清洗时请拔掉电源插头。

警告标志（请仔细阅读并严格遵守）

- 关于积水：加湿器利用超声波雾化膜振动将液态水分解成水雾，水箱只是一个过渡性的储水工具，所有加湿器底座都会积水，请放心使用。
- 关于雾量调整：如果在使用过程中机器周围有水，则表明房间湿度过高，请把它调整到合适的零。
- 关于遥控器电池：遥控器的电池更换方法和电池型号请参考遥控器背面的说明书。

故障排除方法

故障现象	原因分析	排除方法
屏幕无显示	电源未接通/开关未打开	接通电源/开关打开
开机显示屏内闪亮红灯不喷雾	水位过低	添加水箱容量到适当位置后等待一分钟
开机正常无喷雾	1.雾化片结水垢 2.恒温设置低于周边温度	1.清洁雾化片 2.调高恒温值或关闭恒温功能
异常噪音	与放置的台面产生共鸣	放置在坚固平稳的平面上
屏幕显示、水箱有水，但总是不喷雾或雾量小	开关感应浮子被卡住	拨动浮子，让其上下活动顺畅

经过上述处理后，机器仍不能正常工作，请及时与公司售后服务中心或当地的经销商联系，本公司竭诚为您服务。

清洗维护

- 每周应对水箱、水槽、雾化片进行清洁，清洗前务必先拔掉电源插头。
- 加湿器外部清洗:用低于40℃的干净软湿布擦拭干净外表面即可。
- 清洗时请勿使用腐蚀性、强碱性清洁剂，以免损坏部件。
- 请勿使用化学清洗剂清洁。
- 请经常检查水箱水位，保持加湿器内部清洁。
- 长期不使用时，请保持加湿器内部干燥。

换能器及机座除垢方法

清洁前，请务必关闭电源，拔下电源插头。
将除垢剂倒入机座内，然后加入40度左右的温水，使除垢剂全部溶解，浸泡5-10分钟。然后用清水刷洗除垢剂表面，直至水能流动，同时清洗机座，用清水清洗机座及换能器表面。

产品中有害物质含量表

部件名称	产品中有害物质的名称及含量							
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	镍(Ni)	多溴联苯(PBB)	多溴联苯醚(PBDE)	苯
外壳塑料件	0	0	0	0	0	0	0	0
风机	X	0	0	0	0	X	X	X
线路板组件	X	0	0	0	X	0	0	0
五金、紧固件	0	0	0	0	X	0	0	0
硅胶件	0	0	0	0	0	0	0	0
内部导线	0	0	0	0	0	0	0	0
电源线组件	X	0	0	0	0	0	0	0

本表依据GB/T11384的规定编制
0:表示该有害物质在该部件所有均质材料中含量均在GB/T26572规定的限量要求以下。
X:表示该有害物质至少在该部件的某一均质材料中含量超过GB/T26572规定的限量要求。
注:本表公示的产品中有害物质含量不包含含定期更换的电池。
在本说明书所述的正常使用条件下本产品的环保使用期限为10年，在环保使用期限内可以安心使用，超过环保使用期限之后应送往进入到回收循环系统。

保修政策

- 一、本机自购买之日起(以发票日期为准)，正常使用，质量问题保修1年；
- 二、下列情况不属于免费保修范围，但仍可享受只收材料成本的优惠维修服务：
1.未按说明书的操作步骤及注意事项造成产品故障；
2.因意外灾害，不可抗力因素等造成产品故障的，如电压过高、火灾、水灾、地震等；
3.超过保修期的；
4.顾客擅自更改、错误使用，或意外破坏的；
5.使用环境超出产品规格所定；
- 三、请妥善保管保修卡，遗失恕不补发；
- 四、产品升级、规格参数如有更新，恕不另行通知，实际产品的形式和颜色可能与实物所显示略有不同，请以实物为准。

保修卡

顾客姓名	联系电话	
购买日期	产品型号	
顾客地址		
购买店铺		
维修记录	①	
	②	
	③	

How the product works


The ultrasonic air humidifier uses ultrasonic vibration to generate 17 million times per second according to the frequency oscillation principle, which converts water into ultra-fine particles of 1~5 microns, and then diffuses water into the air through the pneumatic device, so as to achieve the purpose of humidifying the air evenly.

Product usage

- Put the machine on a horizontal table. Pick up the water tank cover and pour an appropriate amount of clean water into the tank
Tap water or purified water to the maximum water level (MAX). (Power must be turned off when injecting water)
- Cover the water tank cover and turn on the power. Before connecting to the power supply, please confirm that the rated voltage must match the machine. The working voltage of the device is consistent.
- Turn on the power switch and the machine starts working.
- When the water level of the machine is too low, the machine will be cutting off the power supply and stops working. Please turn off the power switch first, then add water to the water tank.


Model NO.	F6
Rated voltage	220v
Rated power	25W
Rated frequency	50/60Hz
Water tank Capacity	5L
Maximum Flow	300ML/h
Operate method	Mechanical/Smart
Size	200x200x320mm

instruction

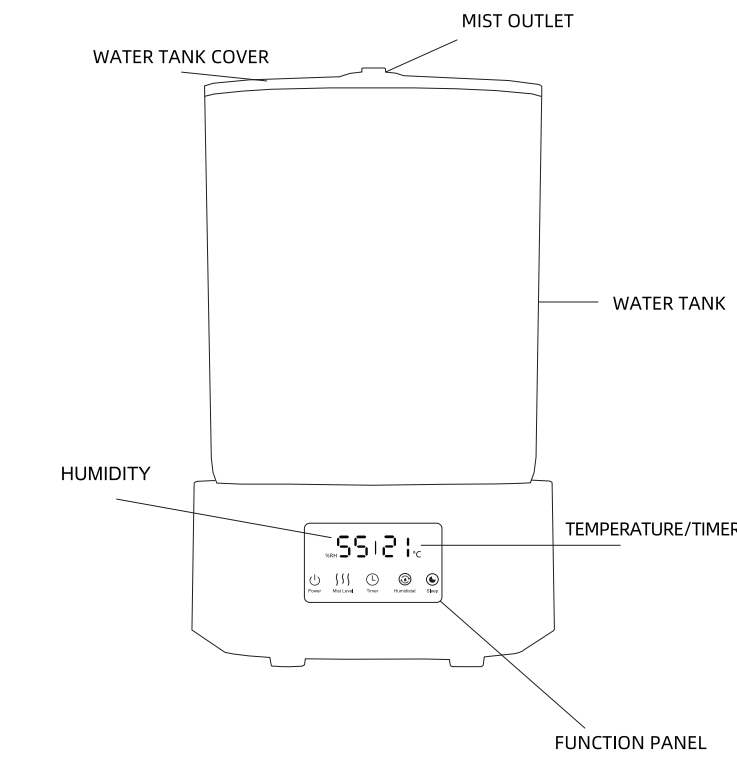


Mechanical Operation Guide

 - Put the machine on a horizontal table, remove the water tank cover and lift up the water tank. Inject a proper amount of clean tap water or distilled water to the "maximum water level" marked on the inside of the water tank. (the power plug must be unplugged when filling water).
- Place the water tank back on the machine base stably, then cover the water tank and plug the power plug into the socket. make sure that the rated voltage must be consistent with the working voltage of the machine before turning on the power.
- Turn on the power switch / fog adjustment switch, and the machine starts to work. The amount of fog can be adjusted at will.
- When the water level of the machine is too low, the machine will automatically cut off the power and stop to work. Please turn off the power switch first, pull off the power plug, and then add water to the water tank.
- Use of colorful lights: Tap the bulb icon key in the lower right corner to turn it on or off.

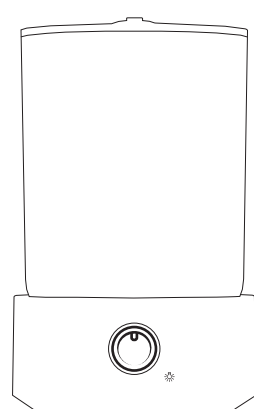

Operating instructions for smart models

 - Power key: after connecting the power, touch the power key, the LCD will light up and the machine will work. Touch the power key again, the humidifier will stop working and enter the standby mode.
- Timer key: this product has the function of appointment timing. It can be shutdown for 1 hour, 2 hours to 8 hours. Touch this key to set the shutdown time and the corresponding time will be displayed on the display screen each time you press this key.
- Mist level key: the product is divided into zero mist volume, low mist volume, medium mist volume and high mist volume. The mist volume can be adjusted. Press the lower mist volume key to adjust the cycle each time. The product starts up with the maximum mist volume by default.
- Constant humidity key: press this key for the first time, the product will enter the constant humidity function, and the "ambient humidity" on the LCD will light up. The default humidity is 40%, and then press 5% to increase until 90% to exit the constant humidity function, so as to adjust the cycle, and stop working when the ambient humidity reaches the preset humidity value.
- Night light function: Touch and hold the timing key for 3 seconds to turn on or off the light function.
- Sleep key: touch the key to start the sleep function on the product control panel. The intelligent constant humidity is 65%, and the display screen will automatically turn off after flashing for 5 seconds. The product keeps working in the original gear. Press any function key to light up the display screen to display the current working state. Press any function key to exit the sleep function when the display screen is on.

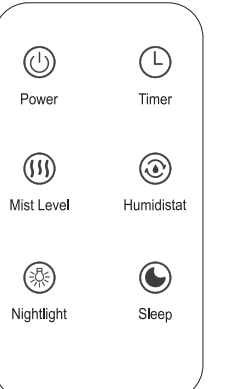

Safety tips

- Please do not pull the plug with wet hands to avoid the risk of electric shock.
- Please do not disassemble, repair, or modify this product without authorization.
- When starting up, please do not touch the atomizing sheet with your hands, otherwise it will make you feel painful.
- The power cord must not be scratched, damaged, knotted, and do not press heavy objects or clamps, processing, otherwise it may cause electric shock, short circuit, and fire.
- Please do not replace the power cord without authorization. If there is any abnormality, please unplug the plug immediately and contact the manufacturer or after-sales customer service.
- If the power cord is damaged, in order to avoid danger, it must be repaired by professional personnel of the manufacturer.
- Please do not separate the water tank and the base during work, and do not touch the water and parts in the base.
- This machine is for indoor use only.
- Please unplug the power plug when it is not in use for a long time or during thunderstorms.
- Please do not turn the machine over under the condition of power and water inside to avoid burning the internal electronic components.
- Please put this product out of the reach of children. Do not let children use or operate this product to avoid accidents.
- Unplug the power plug when filling water and cleaning.

Warning Sign

About the base water:
The humidifier uses ultrasonic atomizing film vibration to break up liquid water into water mist, and the water tank only is a transitional water storage tool, all humidifier base will accumulate water, please rest assured use.
About mist adjustment:
If there is water around the machine during use, it indicates that the room humidity is too high, please adjust it to appropriate the amount of mist.
About the remote control battery:
For the battery replacement method and battery model of the remote control, please refer to the instructions on the back of the remote control.

Trouble shooting methods

If your humidifier is not working properly, please check below before requesting service

Fault phenomenon	Cause Analysis	Method of elimination
No display on the screen	The power is not connected and switch is not turned on	Connect power on to the switch
Flashing red light on display screen, no spray	Low water level	Add tank capacity to appropriate location and wait one minute
Power-on is good, No spray	1. The atomizer scales 2. The constant humidity setting is lower than the constant humidity function	1. Clean atomization sheet 2. Raise the constant humidity value or disable the constant humidity function
Abnormal noise	Resonates with the countertop	Place it on a solid and flat surface
The screen shows that there is water in the tank, but display water shortage, and status "low alert"	The machine recognizes that the fault is stuck	Move the float up and down smoothly

After the above treatment, the machine still can not work normally, please contact the company's after-sales service center or local dealers in time, our company will serve you wholeheartedly.

Cleaning maintenance

- Clean the water tank, sink and atomizing sheet every week, and unplug the power plug before cleaning.
 - External cleaning: wipe the external surface with a clean soft cloth below 40°C.
 - Do not use hard objects to avoid damaging the parts.
 - Do not use chemical detergents to clean.
 - Always replace the water in the water tank to keep the inside of the humidifier dry.
 - When not in use for a long time, please keep the inside of the humidifier dry.
- Descaling method of transducer and machine base**
Before cleaning, make sure to turn off the power and unplug the power plug.
Pour the disincrustant into the base, and then add warm water in about 60s to make the disincrustant dissolve all, and then soak for 5-10 minutes.
Use a cleaning brush to scrub the surface of the transducer until the scale is removed.
At the same time, clean the base and the surface of the machine with clean water.

Table of harmful substances content of products

Part name	Name and content of harmful substances in products							
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)		
Plastic housing	0	0	0	0	0	0	0	0
Blower fan	X	0	0	0	0	X	X	X
Circuit board	X	0	0	0	X	0	0	0
Fasteners	0	0	0	0	X	0	0	0
Silicone piece	0	0	0	0	0	0	0	0
Internal conductor	0	0	0	0	0	0	0	0
Power cord	X	0	0	0	0	0	0	0

This table is prepared according to SJ/T11384, which indicates that the content of the hazardous substance in all materials of the part is in the quantity specified in GB/T26572.
The following x indicates that the main substance at least contains in the homogeneous material of the part, which is beyond the quantity specified in GB/T26572.
Note: In the products published in this table, there are gumax batteries which are not included in the quantity specified for replacement.

Under the normal usage conditions described in this manual, the environmental protection service life of this product is 10 years.
It can be used with confidence during the environmental protection service life, and after exceeding the environmental protection service life, it should enter the recycling system.

WARRANTY POLICY

1. THE MACHINE CAN BE GUARANTEED FOR 1 YEAR IN NORMAL USE FROM THE DATE OF PURCHASE/SUBJECT TO THE DATE OF THE PURCHASE INVOICE. THE FOLLOWING CONDITIONS ARE NOT COVERED BY THE FREE WARRANTY BUT YOU CAN STILL ENJOY THE PREFERENTIAL MAINTENANCE SERVICE OF MATERIAL COST ONLY IN CASE OF A FAILURE TO FOLLOW THE OPERATING STEPS AND PRECAUTIONS OF THE MANUAL CAUSING THE PRODUCT TO MALFUNCTION. PRODUCT FAILURE DUE TO ACCIDENTAL DEBRASERS, FORCE MAJEURE AND OTHER FACTORS, SUCH AS EXCESSIVE HEIGHT VOLTAGE, FIRE, FLOOD, EARTHQUAKE, ETC. THE WARRANTY PERIOD HAS EXPIRED. THE CUSTOMER MAKES UNAUTHORIZED CHANGES, MISUSE, OR ACCIDENTAL DAMAGES. THE USE ENVIRONMENT EXCEEDS THE PRODUCT SPECIFICATIONS. PLEASE KEEP THE WARRANTY CARD PROPERLY. IT WILL NOT BE REISSUED AFTER IT IS LOST.

4. IF THE PRODUCT AND THE SPECIFICATION PARAMETERS ARE UPDATED, NO FURTHER NOTICE WILL BE GIVEN. THE FORM AND COLOR MAY BE SLIGHTLY DIFFERENT FROM THE ACTUAL PRODUCT. PLEASE REFER TO THE ACTUAL PRODUCT.

PRODUCT WARRANTY CARD

CUSTOMER NAME	CONTRACT NUMBER
DATE OF PURCHASE	MODEL
CUSTOMER ADDRESS	
SHOP OF PURCHASE	
MAINTENANCE RECORD	①
	②
	③